


INSTRUCTIONS FOR MINI TRANSMITTER

IF YOU WILL BE USING A MINI TRANSMITTER (Figure A), the Mini Transmitter will operate the same as the Single Entry Transmitter. **Important :** set the code on your Mini Transmitter to match your existing transmitter(s) exactly or it will not function.

1. Remove the Transmitter Cover

Remove the screw from the back of the Mini Transmitter with a small Philips screwdriver. Lay the transmitter down with the button facing up. Unsnap the top of the transmitter to access the coding switches.

Figure A

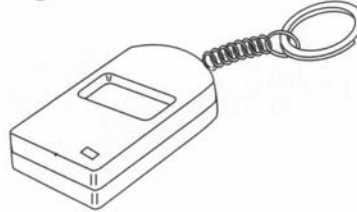


DoorOpenersandMore.com

2. Set the Coding Switches

There are nine (9) dip switches, each of which can be placed in two different positions (+, 0, -). Set the switches in the Mini Transmitter to exactly match your existing transmitter(s). **DO NOT** set all switches in the same position, such as all +, all -, or all zeros (Figure B). **WARNING:** No other adjustments should be made inside the transmitter.

 Figure B



Replace the Transmitter cover and tighten the Philips screw.

NOTE: If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak.

Replace when necessary with 12 Volt Battery.

OM02191K1