

Pre-drill a 5/64 pilot hole
3/4" deep



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Pre-drill a 5/64 pilot hole
3/4" deep

Drilling Template For Keyless Entry

 
Mounting

NOTE: With new installations, we recommend the keyless entry be programmed before mounting to wall.

Locate Keyless Entry Unit within sight of door.


CAUTION: The keypad should be mounted a minimum of 5 feet from the floor to keep it out of the reach of small children and away from all moving parts of the door.

Choose a convenient location that does not interfere with the normal opening and closing operation of the door jamb.

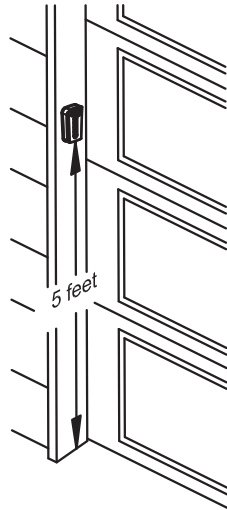

CAUTION: The keypad should be mounted a minimum of 5 feet from the floor to keep it out of the reach of small children.

 Two screws are included for proper mounting into wood or other similar material. If you're mounting into some other material, consult a building contractor to ensure proper hardware is used for a secure mounting. Once you have determined the mounting location, use the drilling template to determine hole positions and drill 5/64" pilot holes 3/4" deep for the two mounting screws.

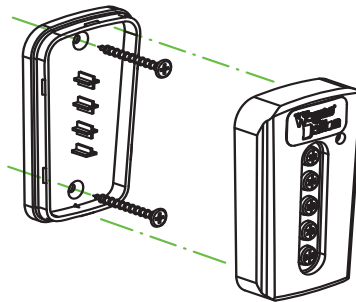

Snap open the Keyless Entry case with a coin. Separate the front case from the back case. Mount the back case in the proper selected location. Do not over tighten the

screw as this may bend or damage the back case. Install and snap the front case onto the back case. Remove paper backing from "Changing Personal Identification Number" label and apply label to a clean surface inside garage.

How your Keyless Entry Operates Your Opener

The following explains how your Keyless Entry can be used to OPEN, CLOSE, START, and STOP your door.

1. Enter your 5-digit PIN (personal identification number); door will begin to move.

NOTE: If you inadvertently enter an incorrect code, the door will not move. To Reset, simultaneously press and release the "7/8" and "9/0" buttons and reenter your PIN number.

2. Unit remains active for next 25 sec. Pressing any key, will stop the door if opening, and stop or reverse the door if closing during the 25 sec. active period.

Battery Replacement

 
WARNING! FIRE AND BURN HAZARD. DO NOT RECHARGE, DISASSEMBLE, HEAT, OR INCINERATE. KEEP BATTERY OUT OF THE REACH OF CHILDREN. INSTALL BATTERY CORRECTLY. DISPOSE OF USED BATTERIES PROMPTLY.

WARNING! IF SWALLOWED, CONTACT PHYSICIAN IMMEDIATELY.


Under normal operating conditions, the battery should be changed once every 12 months. To replace battery perform the following steps:

- A. Snap open case with a coin and remove old battery.
- B. Replace battery (one CR2032 or equivalent) and snap case together.

Dispose of used battery properly.

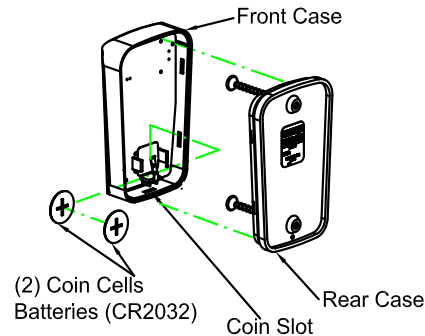

 MODEL 3966 Wireless Keyless Entry System

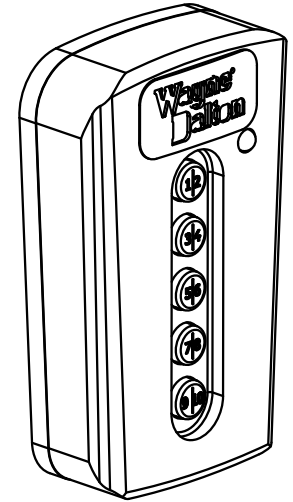

Your new Model 3966 Wireless Keyless Entry contains a state-of-the-art wireless digital transmitter capable of operating an unlimited number of compatible garage door openers.

For added security, your Wireless Keyless Entry utilizes a "rolling code" technology that, each time the transmitter communicates with the receiver, sets a new code, selecting from millions of combinations, reducing the possibility of electronic equipment causing unwanted access.

For proper operation it is important that you follow the programming directions and sequence as written.

Wayne-Dalton Corp.
One Door Drive Mt. Hope, OH 44660
888-827-3667



P/N 306134-02 Rev1 7/16/2007

START HERE



PLEASE READ ALL INSTRUCTIONS THOROUGHLY TO FAMILIARIZE YOURSELF WITH THE PROGRAMMING PROCEDURE BEFORE BEGINNING. SAVE THESE INSTRUCTIONS FOR REFERENCE WHENEVER YOU WISH TO CHANGE YOUR PERSONAL IDENTIFICATION NUMBER (PIN)

Before your Wireless Keypad will be able to operate the opener, there are several programming steps that have to be completed.

FCC WARNING

 
 
To comply with FCC rules, adjustment or modification of transmitter is prohibited. THERE ARE NO USER SERVICEABLE PARTS EXCEPT FOR BATTERY REPLACEMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Covered by one or more of the following Patents D413,579; 6,903,650; 7,173,514; 7,173,516. Other US and Foreign Patents pending.

Programming or Changing Personal Identification Number

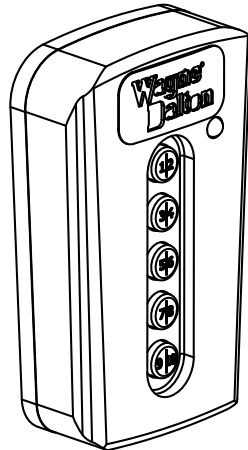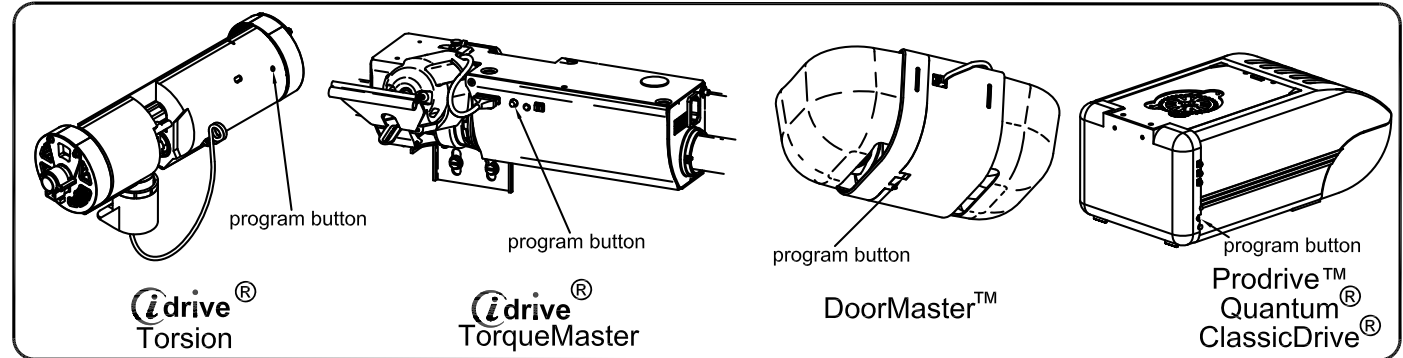

- A. With new installations, we recommend the keyless entry be programmed before mounting to wall.
- B. Unit should be programmed with garage door in the down position. For the iDrive® openers, pull the emergency disconnect handle to the manual operated position (lower position).
- C. Press the program button on the garage door opener to switch the opener to the learn mode (see illustration above). Opener will remain in the learn mode for at least 30 seconds.
- D. Press the desired five digit PIN (PERSONAL IDENTIFICATION NUMBER). Garage door opener should beep or lamp should blink. For the iDrive® openers, return the emergency disconnect handle to the motor operated position (upper position).

NOTE #1: Do not set a code that presents the numbers in sequential order, as an example 1/2, 3/4, 5/6, 7/8, 9/0. Studies show that people naturally press the buttons in a sequential pattern. Also, do not select a code that uses the same button five times consecutively. Thieves can easily figure out these types of codes.

NOTE #2: IF, AT ANY TIME, AN ERROR WAS MADE IN ENTERING THE CODES, SIMPLY SIMULTANEOUSLY PRESS AND RELEASE THE "7/8" AND "9/0" BUTTONS TO RESET THE KEYLESS ENTRY, THEN REPEAT THE ABOVE PROCEDURES.

NOTE #3: One 3966 Keyless Entry can be programmed to open multiple garage door openers. To program for additional openers, repeat steps A thru D above except input a different five digit PIN number for each additional opener.

Wireless Keyless Entry System Model No. 3966 ONE YEAR Limited Warranty

Wayne-Dalton Corp. (The Manufacturer) warrants the Wireless Keyless Entry System will be free from defects in materials and workmanship for a period of ONE YEAR from the date of installation, provided it is properly maintained and cared for under normal use and service. This Warranty extends to the original homeowner, providing the Wireless Keyless Entry System is installed in his/her place of primary residence. It is not transferable. The warranty applies to residential property only and is not valid on commercial or rental property.

NO EMPLOYEE, DISTRIBUTOR, OR REPRESENTATIVE IS AUTHORIZED TO CHANGE THE FOREGOING WARRANTIES IN ANY WAY OR GRANT ANY OTHER WARRANTY ON BEHALF OF THE MANUFACTURER.

The Manufacturer shall not be responsible for any damage resulting to or caused by its products by reason of improper installation, improper storage, unauthorized service, alteration of products, neglect or abuse, any acts of nature beyond Manufacturer's control (such as, but not limited to, lightning, power surges, water damage, etc.), or attempt to use the products for other than the customary usage or for their intended purposes. The above warranty does not cover normal wear or any damage beyond Manufacturer's control or replacement labor.

THIS WARRANTY COVERS A CONSUMER PRODUCT AS DEFINED BY THE MAGNUSON-MOSS WARRANTY ACT. NO WARRANTIES, EXPRESSED OR IMPLIED, (INCLUDING, BUT NOT LIMITED TO, THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), SHALL EXTEND BEYOND THE APPLICABLE TIME PERIOD STATED IN BOLD FACE TYPE ABOVE.

Claims for defects in material and workmanship covered by this warranty shall be made in writing, within the warranty period, to the dealer from whom the product was purchased. Manufacturer may either send a service representative or have the product returned to the Manufacturer at Buyer's expense for inspection. If judged by Manufacturer to be defective in material or workmanship, the product will be replaced or repaired at the option of the Manufacturer, free from all charges except authorized transportation and replacement labor.

THE REMEDIES OF BUYER SET FORTH HEREIN ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER REMEDIES, THE LIABILITY OF MANUFACTURER, WHETHER IN CONTACT, TORT, UNDER ANY WARRANTY OR OTHERWISE, SHALL NOT EXTEND BEYOND ITS OBLIGATION TO REPAIR OR REPLACE, AT ITS OPTION, ANY PRODUCT OR PART FOUND BY MANUFACTURER TO BE DEFECTIVE IN MATERIAL OR WORK SHALL NOT BE RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE.

This Warranty gives you specific legal rights, and you may have other rights, which may vary from state to state. However, some states do not allow limitation on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages so the above limitations or exclusions may not apply to you.



WARNING

Always keep moving door in sight and keep people and objects away until it is completely closed. NO ONE SHOULD CROSS THE PATH OF THE MOVING DOOR.

Never let children operate or play with door controls. Keep all controls away from children.